Power Source Circuit

DESCRIPTION

This is the power source circuit for the outer mirror control ECU.

WIRING DIAGRAM

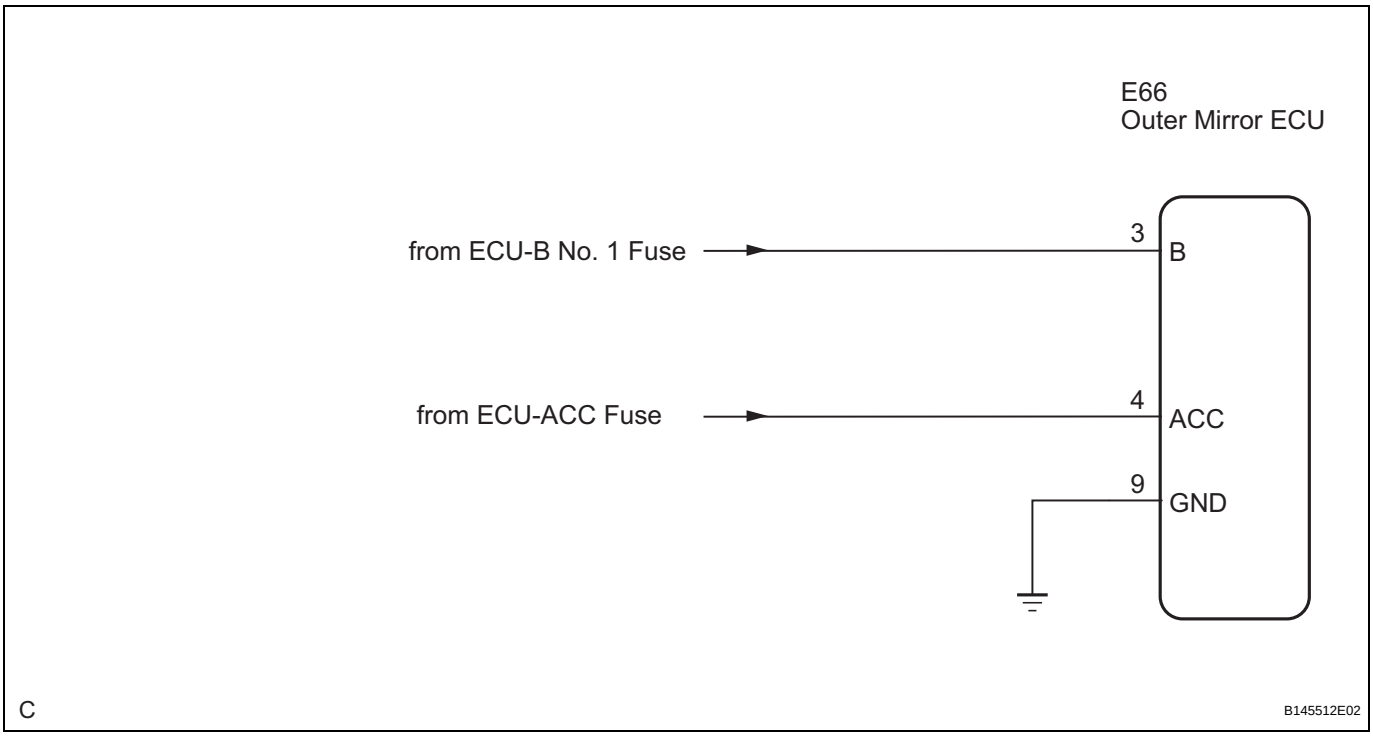

INSPECTION PROCEDURE

MI

1	INSPECT OUTER MIRROR CONTROL ECU (POWER SOURCE)

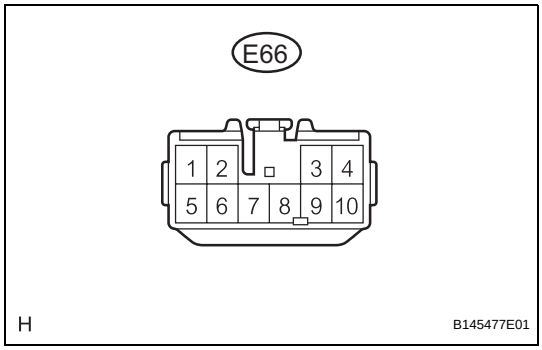

(a) Disconnect the E66 connector.
(b) Measure the voltage and resistance according to the value(s) in the table below.

Standard voltage

Tester Connection	Condition	Specified Condition
E66-3 (B) - Body ground	Always	10 to 14 V
E66-4 (ACC) - Body ground	Engine switch on (ACC)	10 to 14 V

Standard resistance

Tester Connection	Condition	Specified Condition
E66-9 (GND) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE WIRE HARNESS

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE